



i-CON TRACE®

IoT soldering station

Operating instructions

Ersa GmbH & Co. KG
Leonhard-Karl-Str. 24
97877 Wertheim
www.ersa.com
Rev. 4
Printing date: 3/7/2026

Phone +49 9342/800-0
service.tools@kurtzrsa.de
3BA00252-01

Table of contents

1 **For your safety 5**

1.1 ESD sensitive components..... 9

1.2 FCC USA info 9

2 **Introduction 11**

2.1 Intended use..... 11

2.2 Copyright and liability..... 11

2.3 Warranty 11

3 **Technical data 13**

3.1 Electrical connection 13

3.2 General data 13

3.3 Properties..... 13

3.4 Server PC minimum requirements 14

3.5 Web browser minimum requirements..... 14

3.6 WLAN topology 14

3.7 Mobile device minimum requirements 14

3.8 Communication 15

4 **Transport, installation, storage, disposal 16**

4.1 Scope of delivery 16

4.2 Handling and storage info 16

4.3 Disposal 17

5 **Commissioning..... 18**

5.1 Prerequisites for commissioning 18

5.2 The two ways to operate the soldering station through the network with a web-browser-enabled device
..... 18

5.3 Operating the soldering station with an Android or iOS mobile device through a WLAN network..... 22

5.4 control elements and connectors 23

5.5 Preparing the soldering station to be switched on for the first time 24

5.6 Switching on the soldering station for the first time..... 27

5.7 Switching OFF: 28

5.8 Establishing a WLAN connection between the soldering station and a network..... 29

5.9 Operating the soldering station through the “Ersa TRACE” app 31

5.10 Establishing a LAN connection between the soldering station and a network 36

6 **Function description..... 39**

6.1 Information on the LED indicators 39

6.2 Changing soldering tips 40

7 Service and maintenance 46

7.1 Error messages and error codes..... 46

7.2 Error treatment 47

7.3 Cleaning and Maintenance..... 51

7.4 Defaults 53

8 Spare/wear parts and accessories 54

1. For your safety

Safety Notes

Ersa products are developed, manufactured and tested in compliance with essential safety requirements.

Residual risks nevertheless remain!

You should therefore read these instructions before you start to operate the tool for the first time. The instructions will help you operate the soldering tool safely as well as becoming acquainted with all functions and properly using them.

The enclosed information leaflet "Safety Notes" is also part of the safety instructions to be adhered to.

National and international safety, health and occupational safety regulations must be complied with.



DANGER

Danger due to improper operation



- a) Comply with the operating instructions!
- b) Every person involved in the commissioning, operation and/or maintenance of the soldering tool must have read and understood the "Safety Notes" and chapter "For your safety", as well as the chapters in these operating instructions relating to the above tasks!
- c) For the operation of the soldering tool, the local safety and accident prevention regulations must also be adhered to!
- d) Always keep these instructions near the soldering tool, in a place accessible to all users at all times!



CAUTION

Risk of accidents! Do not damage the components of the soldering tools!



- a) Check all components before each use!
- b) Do not operate the soldering station if it is damaged!
- c) Repairs may only be carried out by a specialist or the manufacturer!
- d) Use only original Ersa consumables and spare parts.
- e) Do not perform any retrofitting!
Otherwise, the warranty will become null and void.
- f) Never operate the soldering iron without the soldering tip, overheating hazard!

 WARNING

Fire hazard due to hot soldering tool!



- a) Before switching on the soldering station, all easily combustible objects, liquids and gases must be removed from the working area!
- b) Always place the soldering tool in the supporting stand when not in use!
- c) Disconnect the soldering station from the mains after use!

 CAUTION

Risk of burns! The soldering iron gets hot immediately after it is switched on!



Never touch the hot soldering tip or the hot heating element directly!

 CAUTION

Risk of burns! The soldering station may be controlled only by its user!



The temperature or switch-off times for the i-CON TRACE soldering station controlled with the “Ersa TRACE Cockpit” or “Ersa Trace” web app may be set only by the user of the i-CON TRACE soldering station!

 WARNING

Danger of electric shock when soldering!



- a) Carry out soldering work only on de-energised parts!
- b) Do not expose the soldering station and soldering iron to large mechanical loads!
- c) Do not immerse the soldering tool in liquids to cool it off!

 WARNING

Possible danger of fire or property damage!



Danger of heat accumulation if ventilation slots are covered!

- a) Never cover the ventilation slots of the soldering station!

 CAUTION**Wear protective equipment!**

During soldering, hot solder or corrosive flux material can splatter from the solder joint. Avoid getting solder or flux material in the eyes or on the skin by wearing protective equipment!

- a) Adhere to the company's internal regulations for protective clothing!
- b) Adhere to the safety data sheets for the solder and flux material used!

 **WARNING****Dangerous electrical voltage!**

Death or very serious injuries due to electric shock!

- a) In the event of faults in the electrical power supply, switch off the soldering station immediately!
- b) Work on electrical parts may only be carried out by a qualified electrician or by persons instructed in electrical engineering under the direction and supervision of a qualified electrician in accordance with the electrotechnical regulations!
- c) Never open the device!
- d) Only use original fuses with the prescribed current rating!
- e) Only use voltage-insulated tools!
- f) Protect the connecting cable:
Do not use the connecting cable to pull the mains plug or to carry the device!
Keep connecting cables clear of heat, oil or sharp edges. Replace a damaged connecting cable immediately, as this may lead to fires, short circuits and electric shock!

 **CAUTION****Eating and drinking forbidden!**

- ✓ Solders and solder materials are toxic. To prevent them from entering the organism, observe the following:
 - a) Do not eat, drink or smoke in rooms where soldering is taking place!
 - b) Always wash your hands thoroughly after working with solder and flux materials!
 - c) Adhere to the safety data sheets for the solder and flux materials used!



CAUTION

Toxic fumes when soldering!



During soldering, emissions are produced from the solder materials and the assemblies. These emissions are harmful to health. Do not inhale the fumes!

- a) Ensure sufficient ventilation or use a solder fume extraction system!
- b) Adhere to the safety data sheets for the solder and flux materials used!

WARNING

Danger of fire and electric shock!



Humidity and moisture conduct electricity. This may lead to fires and electric shock.

- a) Protect the device from moisture and humidity!
- b) Do not switch on wet or humid soldering tools!

WARNING

Fire hazard due to unattended soldering station!



- a) Keep any unauthorised people at a safe distance from the soldering station to prevent accidents and burns!
- b) Never leave the soldering station unattended when running!
- c) The soldering tool must be stored in its stand.
- d) The temperature or switch-off times for the i-CON TRACE soldering station controlled with the “Ersa TRACE Cockpit” web app or “Ersa Trace” app may be set by the user of the i-CON TRACE soldering station only!
- e) After switching off the soldering station, the soldering tool requires time to cool down.

CAUTION

Avoid any risk of injury!



- a) Check the work tool for damage before switching it on!
- b) Operate and store the work tool only under the ambient conditions specified in the data sheet!
- c) Service and clean the work tool as provided for in the operating instructions!
- d) Keep the workplace tidy!

**CAUTION**

Risk of accidents! Danger due to use by unauthorised persons!

- a) Ensure that unauthorised persons, especially children, do not have access to the soldering station!

1.1**ESD sensitive components****NOTE****Working with sensitive components**

Some components can be damaged by electrostatic discharges. Observe the warnings on the packaging or ask the manufacturers or suppliers. To protect these components use an ESD safe workplace (ESD = electrostatic discharge)

This environment can be created with parts that comply with the IEC61340-5-1 standard.

The conductive ESD work base is connected via an ESD earthing plug (with built-in 1 MOhm safety resistor) to a protective earth contact (PE) of the same socket strip to which the protective earth conductor (PE) of the i-CON TRACE® is connected (see Fig. 1).

Both ESD earth lines connected to the ESD work base must have integrated 1 MOhm safety resistors.

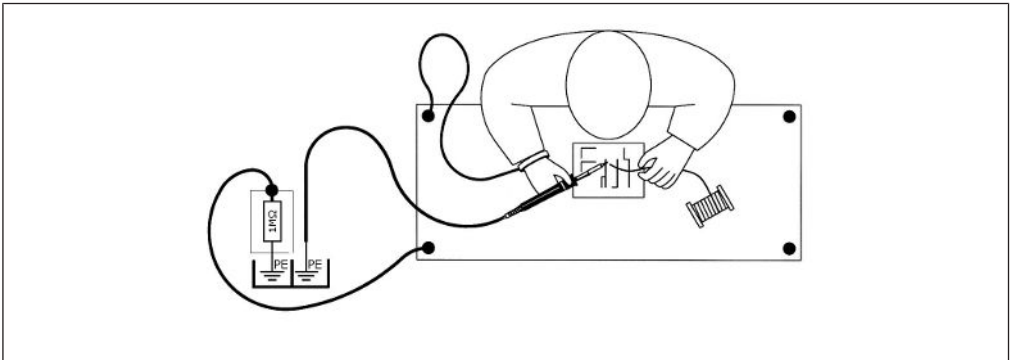


Fig. 1: Proper connection: Soldering iron with protection class 1 (protective earth conductor) and ESD earth plug in the same multiple socket outlet

1.2**FCC USA info**

This device has been tested and found to comply with the limit values for Class A digital devices, pursuant to Part 15 of the FCC rules.

These limit values aim to provide reasonable protection against harmful interfer-

ence when the device is operated in a commercial environment. This device generates, uses and can even radiate radio frequency energy. If it is not installed and used in accordance with the operating instructions, it can cause radio traffic interference. Operating this device in a residential area can cause interference. In this case, the user shall remedy the interference at their own expense.

2. Introduction

2.1 Intended use

The soldering tool i-CON TRACE® was designed state-of-the-art and according to approved technical safety regulations. However, residual risks may originate from the soldering tool, especially if it is operated improperly by untrained personnel or used for purposes other than those it is intended for.

The soldering station i-CON TRACE® is intended for industrial use in closed rooms. The tool is designed exclusively for soft soldering. Any other further use shall be regarded as improper. The manufacturer/supplier is not liable for any damage resulting therefrom. Intended use shall also include adhering to these operating instructions as well as to the safety provisions contained therein and enclosed with the product.

2.2 Copyright and liability

These Operating Instructions have been drawn up with utmost care by Ersä. However, no warranty can be given covering content, completeness and quality of specifications in this manual. The table of contents is updated and adapted to current conditions.

All the data contained in these operating instructions, as well as the information on products and procedures have been ascertained using the latest technical tools to our best knowledge. This information is not binding nor does it relieve the user from their own responsibility to check the device before use.

We shall not be held liable for any infringement of third party rights for applications and procedures without prior express, written confirmation. We reserve the right to make technical changes in order to further improve the product.

Liability for direct, consequential and indirect damage resulting from the purchase of this product is ruled out, to the extent permitted by law. All rights reserved.

We recommend keeping the packaging material for later use. Only with this packaging material can the soldering tool be safely packed, stored, handled or shipped. These operating instructions must neither be reproduced nor modified, transferred or translated into other languages, not even in extracts, without the written approval of Ersä GmbH & Co. KG. This also applies to the relevant software instructions for the "Ersä TRACE Cockpit" web app.

2.3 Warranty

Heating elements and soldering or desoldering tips are treated as wear parts and are, therefore, not subject to the warranty. Any return of goods due to material or production faults must be accompanied by a written description of the fault that has occurred, together with a proof of purchase, the receipt of which must be acknowledged.

The warranty period complies with the applicable General Sale, Delivery and Pay-

ment Terms of Ersa GmbH & Co. KG. In the event of improper use and tampering with the device, any warranty and liability claims of the purchaser against the manufacturer shall become void.

3. Technical data

3.1 Electrical connection

Designation	
Line voltage (VAC)	220-240
Line frequency (Hz)	50-60
Fuse, slow blowing (A)	0.8
Line voltage (VAC)	110-120
Line frequency (Hz)	50-60
Fuse, slow blowing (A)	1.6
Secondary voltage (VAC)	24

3.2 General data

Station	
Width (mm)	156
Depth (mm)	175
Height (mm)	102
Weight (kg)	approx. 3.1

Supporting stand	
Width (mm)	146
Depth (mm)	135
Height (mm)	94
Weight (kg)	approx. 0.75

3.3 Properties

Designation	
Maximum short-term heating output (W)	150
Medium heating output (W)	80
Temperature range, continuously adjustable (°C / °F)	50-450 / 122-842
Control oscillations in idle state (°C / °F)	<±2 / <±3.6
Ohmic resistance between soldering tip and earth (Ohm)	<2
Soldering tip to earth leakage voltage (mV eff)	<2

Designation	
Permissible ambient temperature (°C / °F)	0-40 / 32-104
Control technology	SENSOTRONIC (PID behaviour)
Function display	LED
Supply line, PVC, with female connector (m)	2
Protection class	I
According to MIL-SPEC/ESA standard	✓
VDE certified, EMC tested	✓
Anti-static surface, especially suitable for use in the ESD range.	✓
Conformity	EC, CMIIT, EAC
Connectable soldering tool	i-TOOL TRACE
Optional	Ethernet network card for LAN connection

3.4

Server PC minimum requirements

Designation	
Processor (GHz)	2,4; Dual Core
Random access memory RAM (GB)	4
Available data storage (GB)	16
Operating systems	Windows 10 (20H2); Windows Server 2016

3.5

Web browser minimum requirements

Designation	
Screen resolution at least	1920 x 1080
Firefox	v78.0
Google Chrome	v87.0
Microsoft Edge	v93.0

3.6

WLAN topology

Designation	
Frequency range (ghz)	2.4

3.7

Mobile device minimum requirements

Designation	
Android operating system	from version 5.0
Apple iOS operating system	from version 9.0

Designation	
Apple iPadOS operating system	from version 13.0

3.8 **Communication**

Designation	
Network protocol	MQTT must be approved

4. Transport, installation, storage, disposal

4.1 Scope of delivery



NOTE

Is delivery not complete or are there any damaged parts?

Check the delivery for completeness. If any items are missing or damaged, contact the supplier!

Item number	Designation
0ICT103A001	Electric soldering station i-CON TRACE® 220-240 V; 0.44 A; 24 V, anti-static or 110-120 V; 0.88 A; 24 V; anti-static
0140CDJ001	Soldering iron i-TOOL TRACE, 24 V, anti-static with soldering tip 0142CDLF16
0A58000001	Supporting stand Tip'n'Turn, anti-static, with dry cleaner 0008M and sponge 0004G
3K120KR053075	Connecting cable, 2 m
3BA00251	Brief instructions
3BA00188	Safety notes

Call up the overview of i-CON-TRACE®-soldering tip series 142 through the Internet quick link [142.ersa.com](https://www.142.ersa.com).

4.2 Handling and storage info



NOTE

Risk of material damage!

- Protect the soldering station from the effects of the weather (moisture, damp, sea air, fog) during storage!
- During storage in high humidity areas for an extended period of time, the soldering station must be hermetically packed and provided with a dehumidifying agent!
- Storage and shipping in the original packaging!

We recommend keeping the packaging material for later use. Only with this packaging material can the soldering tool be safely packed, stored, handled or shipped.

4.3

Disposal

NOTE**Disposal of electrical equipment**

Notes on waste disposal acc. to the directive 2012/19/EU of the European Parliament and the Committee from 4th of July 2012 for used electric and electronic appliances:



Products marked with a crossed out waste bin must not be disposed of together with unsorted domestic waste. The municipalities established special collecting points for this type of waste. Please consult your council and ask for available possibilities for the separated collection of old appliances. You thereby contribute to the reuse or other forms of use of old appliances, with the aim of protecting the environment and human health.

Follow the operating/safety instructions for the correct disposal of the packaging, which should be kept until the end of their useful life.

 CAUTION**Disposal**

- ✓ Solder waste is hazardous and must not be disposed of with normal household waste!
- a) Ensure safe and environmentally friendly disposal of the soldering tool!
- b) Provide safe and environmentally friendly disposal of operating/auxiliary materials and replacement parts!
- c) Comply with the municipal waste disposal regulations!

5. Commissioning

5.1 Prerequisites for commissioning

- a) Check the contents in the package for completeness. Read more about this in Chapter [Scope of delivery](#) [► 16]. Should any of the listed components be damaged or incomplete, immediately contact the supplier.
- b) As a first step, please find out how to safely operate the soldering station in Chapter [For your safety](#) [► 5].

Prerequisites of the current and network connection

If more than one soldering station is operated at a workplace, compensating currents may occur. To avoid this, the mains plugs of all soldering stations must be plugged into the same multiple socket outlet, or directly into adjacent sockets. If several soldering stations are connected through an Ethernet LAN cable, they must be connected to the same switch to avoid compensating currents.

5.2 The two ways to operate the soldering station through the network with a web-browser-enabled device

- Operate the soldering station by connecting it through a WLAN network to a web-browser-enabled device.
In this case, the soldering station must be integrated into an existing WLAN network using a smartphone or tablet with an Android or iOS operating system. The “Ersa TRACE” app must be installed on a mobile device.
If the soldering station is connected to a WLAN network, it must be operated through the network with the “Ersa TRACE Cockpit” web app on a web-browser-enabled device.
- Operate the soldering station through LAN cable in the Ethernet network with a web-browser-enabled device.
To do so, insert the optional Ethernet network card into the soldering station (see Chapter [Spare/wear parts and accessories](#) [► 54]).
If the soldering station is connected to the network through a LAN cable, it must be operated with the “Ersa TRACE Cockpit” web app on a web-browser-enabled device with LAN connection. A mobile device with the “Ersa TRACE” app to set up a network connection is not required.

5.2.1 Network connection: Work steps and methods

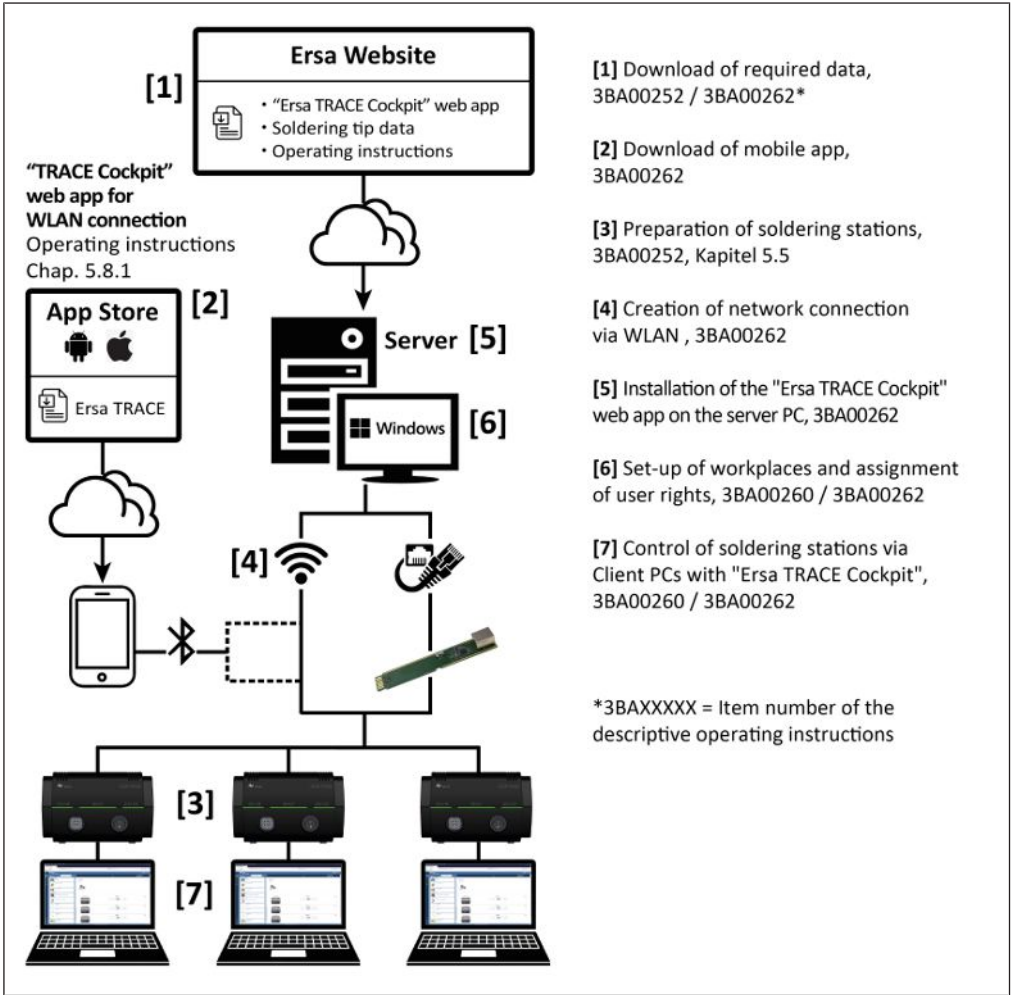


Fig. 2: Establishing a network connection and instructions

5.2.2 The network ports

The following ports must be enabled to operate "Ersa TRACE Cockpit":

The ports to be enabled on the server PC (bidirectional):

Communication protocol	Network port
HTTP	80

mDNS	5353
MQTT	1883
Postgres	5432
Ersa TRACE Cockpit	4660; 8081-8090

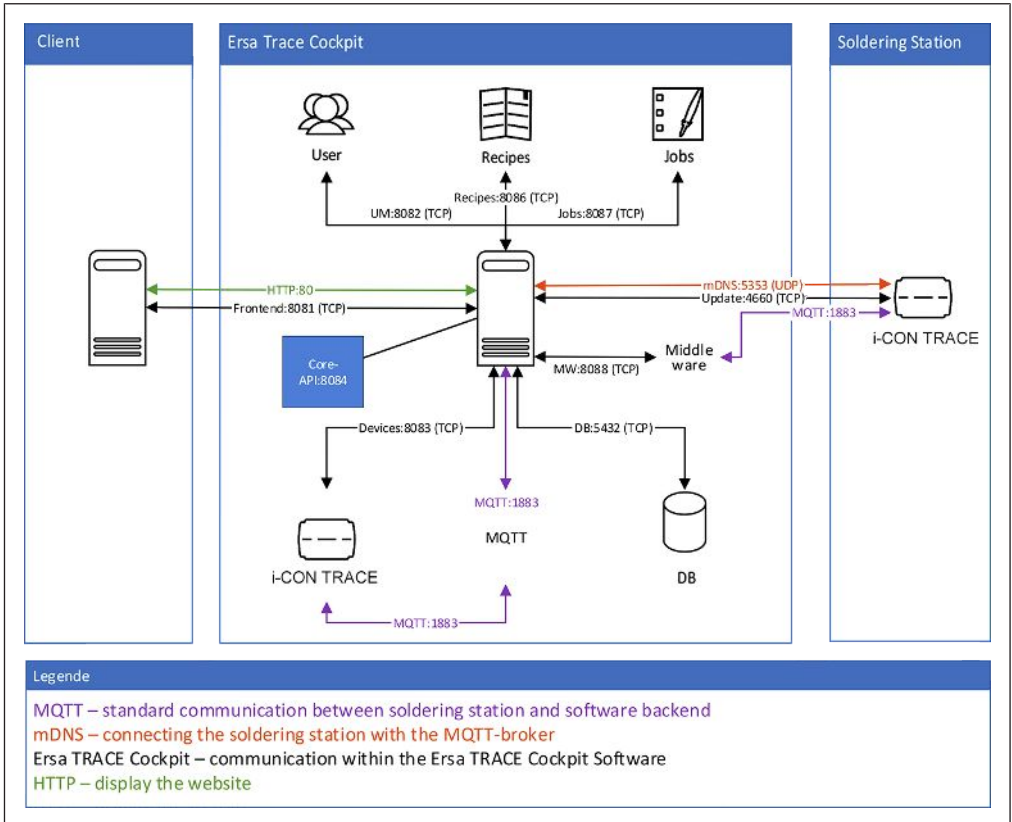


Fig. 3: The ports to be enabled

Enabled ports can be edited in the Control Bench of Ersa TRACE Cockpit. To do so, select the [Port Settings] button.

Ersa TRACE Cockpit must be started with administrator rights.

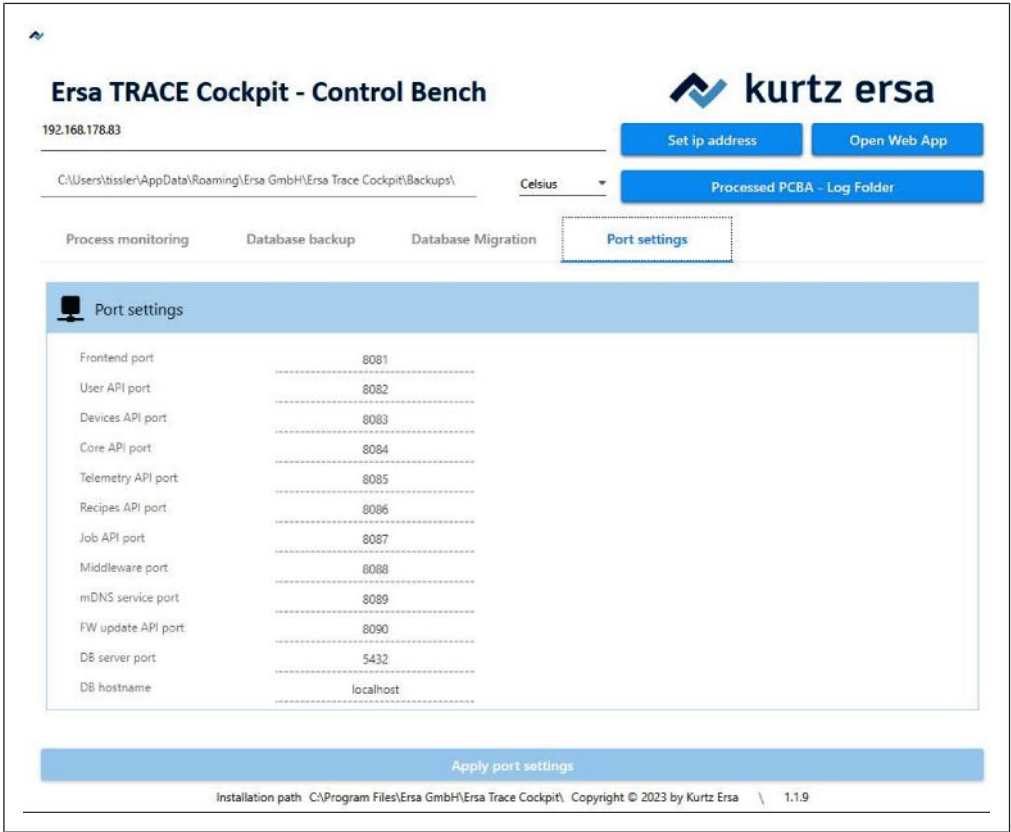


Fig. 4: Editing enabled ports

5.3 Operating the soldering station with an Android or iOS mobile device through a WLAN network

Alternatively, you have the option of operating the soldering station with a mobile device through a WLAN network. To do so, the soldering station must be integrated into an existing WLAN network using a smartphone or tablet with an Android or iOS operating system.

The “Ersa TRACE” app must be installed on a mobile device. If the soldering station is connected to a WLAN network, it must be operated through it with a mobile device equipped with the “Ersa TRACE” app.

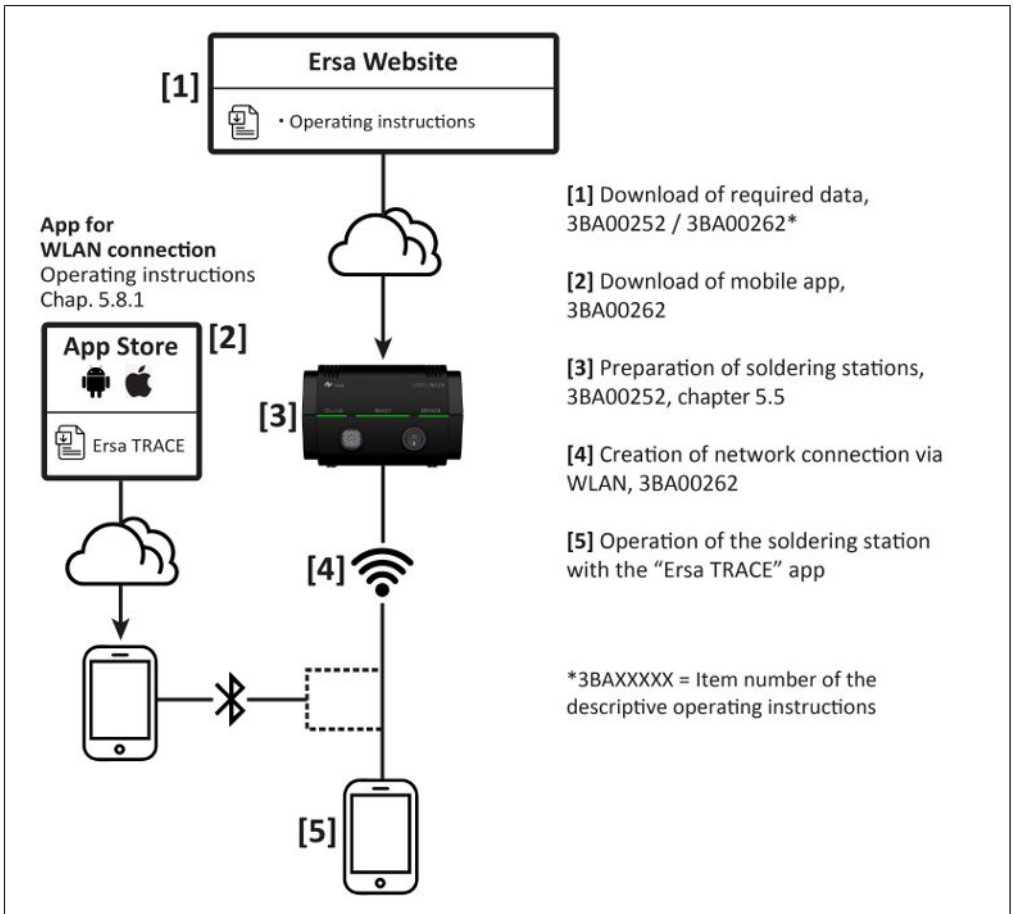


Fig. 5: Operating the soldering station through a WLAN network using a mobile device

5.4 control elements and connectors

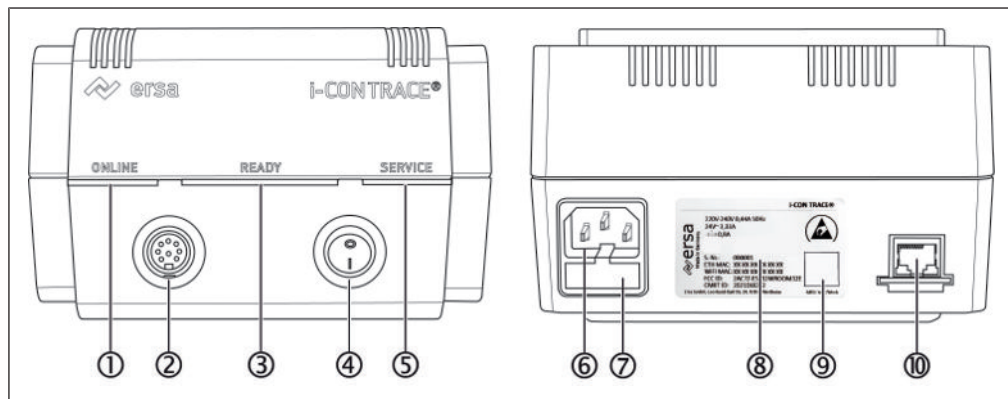


Fig. 6: Front and back view

1	ONLINE LED	6	Network cable connection
2	Soldering iron socket	7	Fuse compartment
3	READY LED	8	Type plate
4	On/Off switch	9	QR code of this soldering station
5	SERVICE LED	10	Optional Ethernet network card

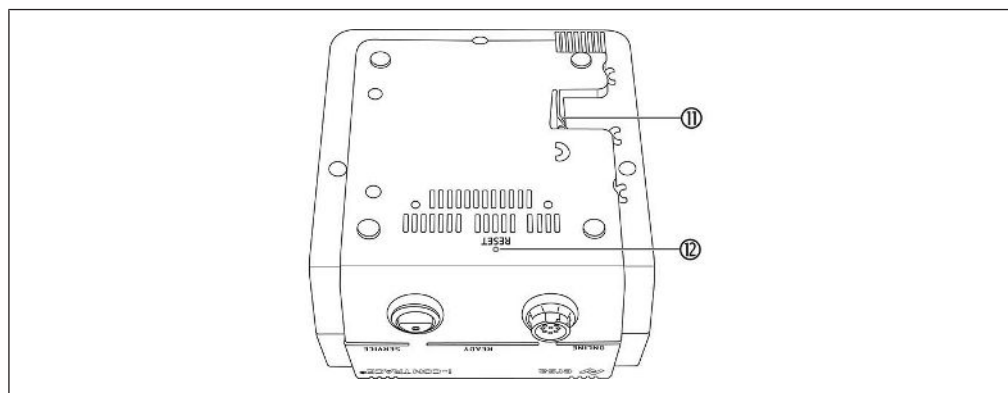


Fig. 7: Bottom side

11	Release lever	12	Reset key
----	---------------	----	-----------

5.5 Preparing the soldering station to be switched on for the first time

Info: Store the soldering iron only in the central appropriate support, not in the side storage funnels of the soldering tips! (See Fig. 7)

- The Safety Notes listed in the chapter [For your safety](#) [► 5] must be observed.
- Make sure that the line voltage complies with the value specified on the type plate.
- Place the soldering station and the supporting stand on a heat-resistant, conductive ESD work base with the earthing plug connected, as described in chapter [ESD sensitive components](#) [► 9]. Also boards must be stored only on the ESD work surface.
It must be impossible for the devices to tip over.



WARNING

Danger of fire due to highly flammable substances!

- Before switching on the soldering station, all easily combustible objects, liquids and gases must be removed from the working area!

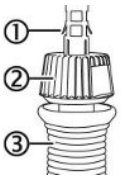


Fig. 8: Soldering tip proper mounting

- Ensure that the On/Off switch is turned off.
- To check the soldering tip for tight seating:
Keep a correct distance between the knurled sleeve [2] and the soldering iron [3], as shown in Fig. 6.
The bayonet mount of the knurled sleeve is completely locked.
The display panels [1] do not touch the knurled sleeve [2].
- Place the soldering iron in the supporting stand (see Fig. 7). There must be no strain on the connecting cable of the soldering iron.

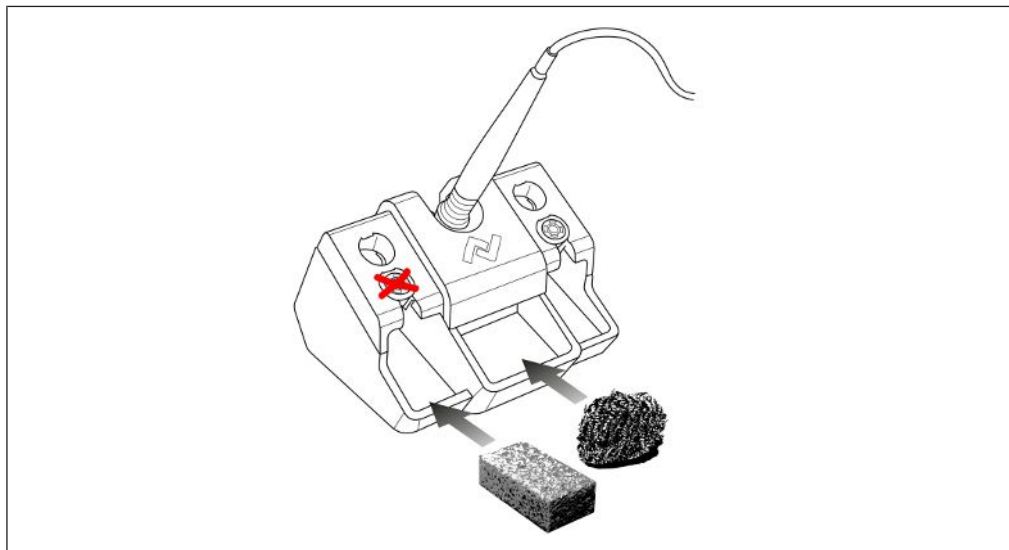


Fig. 9: Proper storage position of the soldering iron. Positioning the dampened sponge and the dry cleaner. If the sponge is in place, do not use the front soldering tip stand there!

- d) Insert the dry cleaner; Fig. 7 shows the recommended position.
- e) If desired, place the dampened sponge on the left side of the supporting stand. Now do not use the front soldering tip stand there.

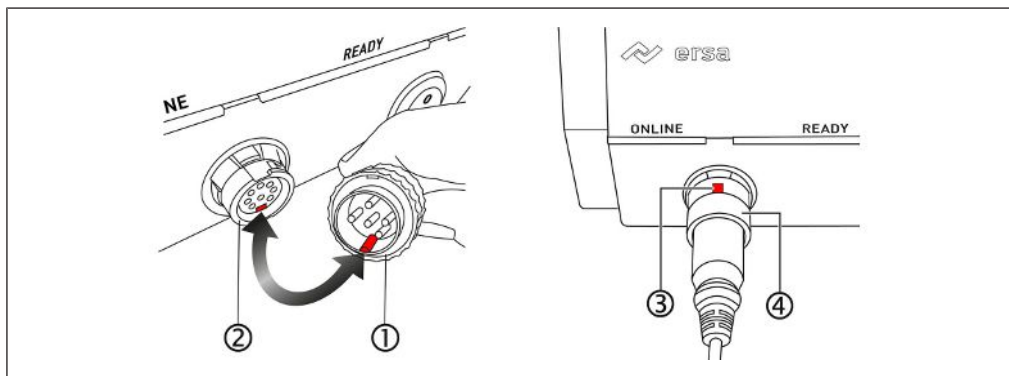


Fig. 10: Plugging in the soldering iron

- f) Fig. 8 left: Insert the plug of the soldering iron [1] into the soldering iron socket at the soldering station [2]. When doing so, align the plug anti-rotation device with the lower recess in the socket, see arrow.
- g) Fig. 8 right: Align the recess of the union nut on the soldering iron plug [3] upwards. Then press the union nut [4] onto the plug and lock it by turning it 90 degree clockwise.

- h) Connect the mains cable to the relevant connector on the soldering station and the mains socket.



 WARNING

Danger of fire due to covered ventilation slots!

- a) Do not place the supporting stand on the soldering station! Never cover the ventilation slots to avoid overheating!

5.6 Switching on the soldering station for the first time



 CAUTION

Risk of burns! The soldering iron gets hot immediately after it is switched on!
Never touch the hot soldering tip or the hot heating element directly!



 CAUTION

Risk of burns! The soldering station with soldering iron is factory preset to 360 °C (680 °F)!
Even without a network connection or installing any software, the soldering iron can be heated by turning on the On/Off switch on the soldering station.

- ✓ The software-related preparation to operate the soldering station has been carried out as described in the software instructions for the “Ersa TRACE Cockpit” web app.
- ✓ Start-up preparation has been performed. As to this, read the previous instructions in chapter [Prerequisites for commissioning](#)  [18](#).
- ✓ The soldering iron is seated in its stand.
 - a) Use the On/Off switch to turn on the soldering station.
 - ⇒ The soldering station is in heating-up mode.
 - ⇒ When switched on for the first time, the LEDs will show the following colors:

ONLINE	Red: no network connection Blue: The soldering station is waiting for the Bluetooth connection to be set up through the “Ersa TRACE” app for integration into the WLAN network Yellow: Network OK, no connection to the “Ersa TRACE” app or “Ersa TRACE Cockpit” web app Green: Network connection established
READY	Red: Soldering tip temperature outside the set temperature range Green: the factory default temperature of 360 °C (680 °F) has been reached
SERVICE	Green: all functions running properly Yellow: no tool connected Red: incorrect tool connected or error message in the “Ersa TRACE” app or “Ersa TRACE Cockpit” web app

5.7

Switching OFF:

**CAUTION****Attention Risk of burns!**

After switching off, the soldering tip remains hot for a long time!

- a) Switch off the soldering station through the on/off switch [1] on the front of the device.

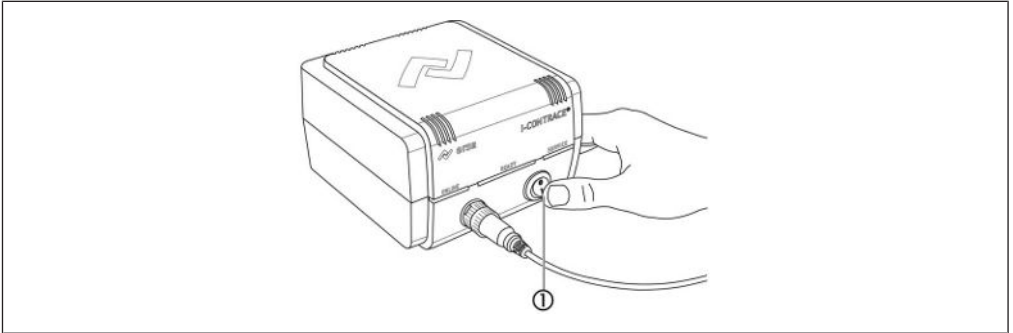


Fig. 11: Switching off the soldering station

- ⇒ All LEDs go out.
- ⇒ The network connection is interrupted and the “Ersa TRACE Cockpit” app shows “OFFLINE” for the switched off soldering station.

5.8 Establishing a WLAN connection between the soldering station and a network

This chapter describes the integration and operation of the soldering station with a WLAN network.

- The PC that is used as a server must be compatible with the network.
- The “Ersa TRACE” app is used to integrate an i-CON TRACE soldering station into the WLAN.

Info: Alternatively, the soldering station can also be integrated into a LAN network. Read more about this in Chapter [Establishing a LAN connection between the soldering station and a network \[▶ 36\]](#). How to operate the “Ersa TRACE Cockpit” web app is described in the separate software instruction manual.

5.8.1 Connecting the soldering station to the WLAN through the “Ersa TRACE” app

If a MAC address is required to register the soldering station in the network, you can find it on the nameplate.

- ✓ Start-up preparation has been performed. Read more about this in Chapter [Prerequisites for commissioning \[▶ 18\]](#) and the following chapters.
 - ✓ Location sharing has been enabled on the mobile device.
No place data has been collected. The data protection guidelines of Kurtz Holding GmbH & Co. Beteiligungs KG apply.
 - ✓ Only a 2.4 ghz WLAN is supported.
- a) Download the “Ersa TRACE” app to your smartphone or tablet from Google Play Store or Apple App Store and install the app. Below are the QR codes to directly access the App Stores:

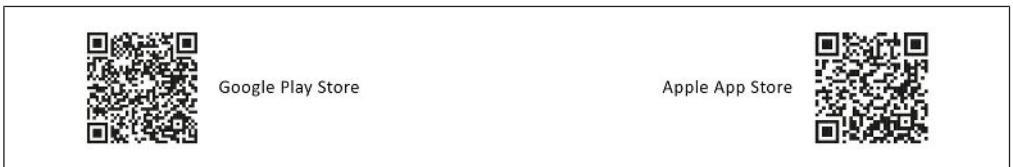


Fig. 12: Links to download “Ersa TRACE”

- b) Switch on Bluetooth on the mobile device and start the “Ersa TRACE” app.
- c) Allow the app to detect the device location.
- d) Allow the app to integrate devices into the local network.
- e) Allow the app to take pictures and record videos.
 - ⇒ You are within the range of coverage of the soldering station Bluetooth connection.

⇒ The soldering iron is seated in its stand.

f) Switch on the soldering station.

⇒ The soldering station ONLINE LED lights up blue.



CAUTION

Risk of burns! The soldering iron gets hot immediately after it is switched on!

Never touch the hot soldering tip or the hot heating element directly!



CAUTION

Risk of burns! The soldering station with soldering iron is factory preset to 360 °C (680 °F)!

Even without a network connection or installing any software, the soldering iron can be heated by turning on the On/Off switch on the soldering station.

If the mobile device camera can be used:

a) Select [Add Device] and [Scan QR Code].

b) Scan the QR code on the nameplate of the soldering station.

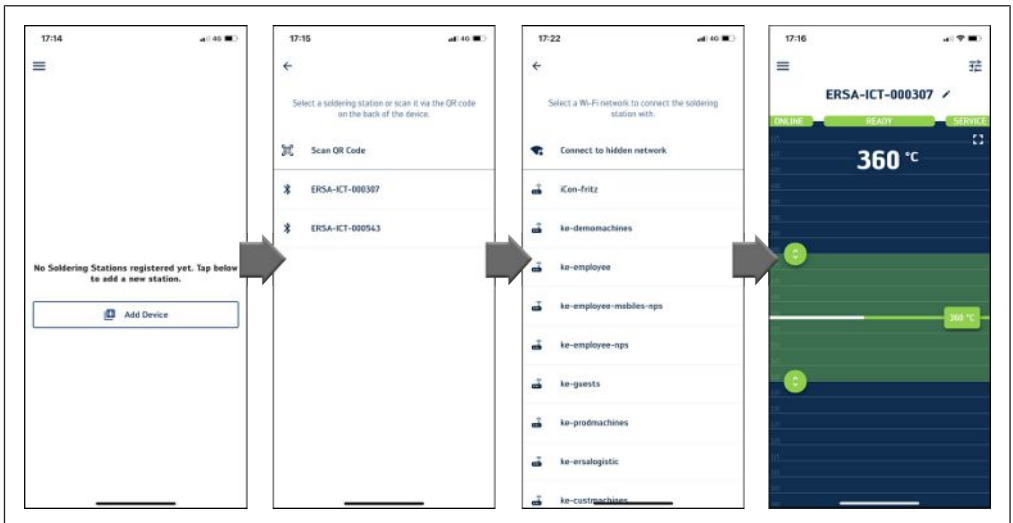


Fig. 13: Bluetooth connection: Scanning the QR code of the soldering station or selecting the Bluetooth network

c) Select the desired WLAN network.

- d) If a smartphone cannot be used in the network:
 - make a note of the IP-address displayed in the mobile app menu [i] in order to enter it into "Ersa TRACE Cockpit" later.
- e) Enter the network password.
 - ⇒ The soldering station has been integrated into the WLAN.
 - ⇒ The ONLINE LED lights up green.

If the mobile device camera cannot be used:

- a) In step 1, select [Add Device] and then the soldering station.
- b) Selecting the desired WLAN network
- c) Enter the network password.
 - ⇒ The soldering station has been integrated into the WLAN.
 - ⇒ The ONLINE LED lights up green.

The soldering station will now automatically connect to the server whenever it is switched on.

The steps to set up a connection between a WLAN network and the soldering station must be carried out again whenever resetting the soldering station.

5.9 Operating the soldering station through the "Ersa TRACE" app

 WARNING**Fire hazard due to hot soldering tool!**

- a) Before switching on the soldering station, all easily combustible objects, liquids and gases must be removed from the working area!
- b) Always place the soldering tool in the supporting stand when not in use!
- c) Disconnect the soldering station from the mains after use!

 CAUTION**Risk of burns! The soldering iron gets hot immediately after it is switched on!**

Never touch the hot soldering tip or the hot heating element directly!

 CAUTION

Risk of burns! The soldering iron gets hot immediately after switch-on!



- a) Before switch-on, make sure that the soldering tip is properly attached!
- b) Do not bring the hot tool into contact with skin or hair.
- c) Do not bring the hot tool into contact with heat-sensitive and combustible materials!
- d) Always use a heat-resistant work surface!
- e) Always place the tool in its stand when not in use!

 CAUTION

Risk of burns! The soldering station can only be controlled by the user of the soldering station!



The temperature or switch-off times for the i-CON TRACE soldering station controlled with the “Ersa TRACE Cockpit” web app or “Ersa Trace” app may be set by the user of the i-CON TRACE soldering station only!

Important user regulation

The i-CON TRACE soldering station must never be set or operated by various people through different devices. There is a risk that when a software application is closed, the soldering station can be operated with another app without the user of the i-CON TRACE soldering station being aware of it.

App prioritisation

The i-CON TRACE soldering station cannot be set or operated simultaneously with the “Ersa TRACE Cockpit” web app and the “Ersa TRACE” app. If both applications are actively open in the same network as the i-CON TRACE soldering station, the “ETC” (Ersa TRACE Cockpit) icon will appear in the “Ersa TRACE” app and the mobile device controller will be locked.



Fig. 14: "ETC" prioritisation display for the "Ersa TRACE Cockpit" web app in the "Ersa TRACE" app

5.9.1 Using the "Ersa TRACE" app

With the "Ersa TRACE" app, several i-CON TRACE soldering stations can be integrated into a network and operated. Additional soldering stations can be integrated into the [Devices] menu.

CAUTION

Risk of burns! The soldering station can only be controlled by the user of the soldering station!



The temperature or switch-off times for the i-CON TRACE soldering station controlled with the "Ersa TRACE Cockpit" web app or "Ersa Trace" app may be set by the user of the i-CON TRACE soldering station only!

To display and set a soldering station additionally integrated into the network, tap on its name and swipe left or right.

On the start page of the "Ersa TRACE" app shown below, the following parameters of the i-CON TRACE soldering station are displayed and can be set or will change automatically:

- Temperature
- Temperature window (green READY LED)
- LED colors
- Station names

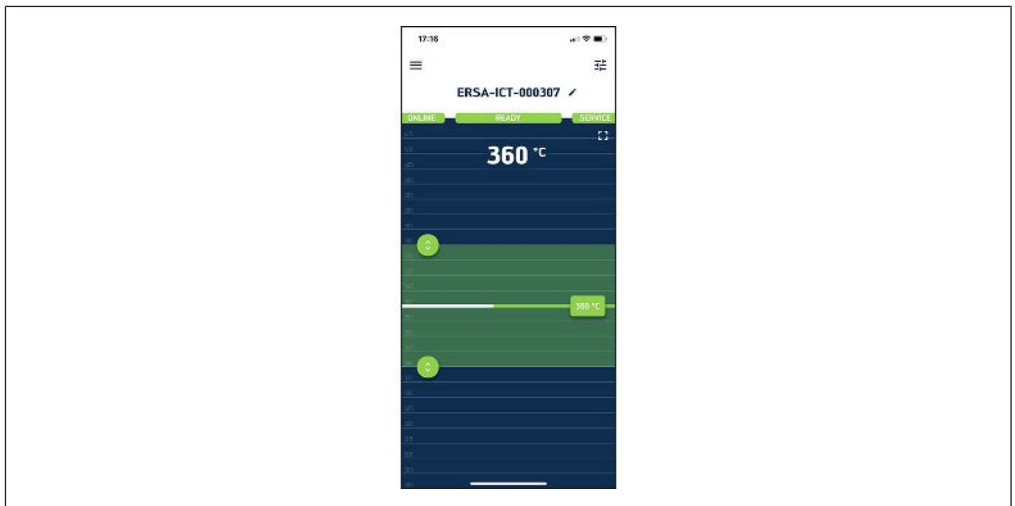


Fig. 15: Starting page of the “Ersa TRACE” app

5.9.2 Firmware update through the “Ersa TRACE” app

If no temperature is displayed, the i-CON TRACE firmware needs updating.

Regularly check and refresh the firmware of the soldering station to the latest version. The current firmware file is always provided with the current app version.

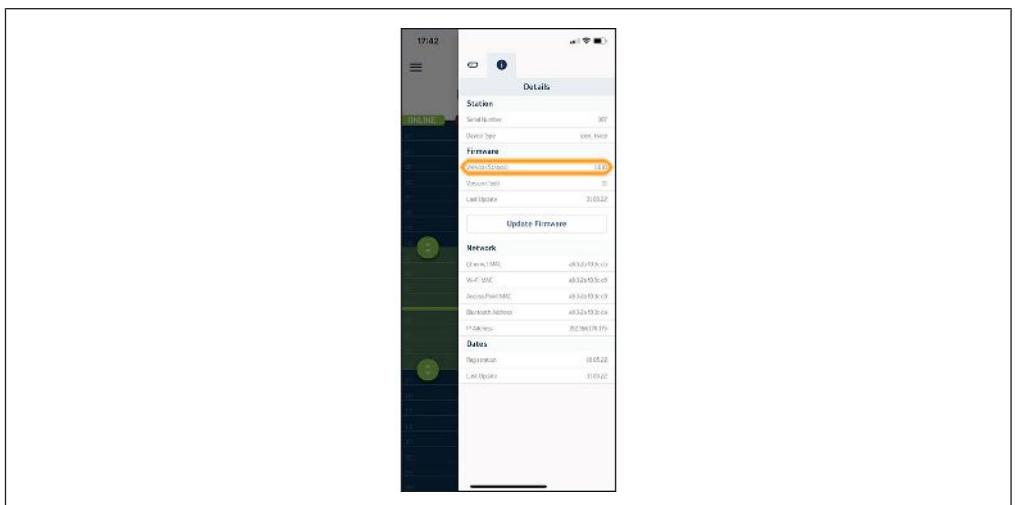


Fig. 16: Version number and update of the soldering station firmware

 CAUTION**Risk of burns!**

If a soldering station with a firmware version prior to version 1.014 receives a firmware update, the soldering tip will be heated to the last set target temperature for several minutes during the update process! Always leave the soldering iron in its stand during the update!

- a) To check for a new firmware version and update the firmware, select [Update Firmware].

5.9.3**Settings**

The soldering station can be calibrated in the [Settings] window. Standby and shut-down settings as well as the energy level can also be set, as described in the software instructions for the “Ersa TRACE Cockpit” web app.

5.10 Establishing a LAN connection between the soldering station and a network

This chapter describes the integration and operation of the soldering station in a LAN network.

- The PC that is used as a server must have an Ethernet LAN connection.
- The optional Ethernet network card (see chapter [Spare/wear parts and accessories](#) [[▶ 54](#)]) must be inserted into the soldering station.

If the Ethernet MAC address is required for the connection between the soldering station and your LAN, you can find it on the type plate.

Info: Alternatively, the soldering station can also be integrated into a LAN network. Read more about this in Chapter [Establishing a WLAN connection between the soldering station and a network](#) [[▶ 29](#)]. How to operate the “Ersa TRACE Cockpit” web app is described in the separate software instruction manual.

5.10.1 Entering the optional Ethernet network card into the soldering station

- ✓ Switch off the soldering station.
- a) In order to avoid damage to the Ethernet network card during handling, ESD protective measures must be taken:
 - ⇒ When touching the Ethernet network card, you must be statically discharged (e.g. put on an ESD wrist strap or touch an earthed object shortly beforehand).
 - ⇒ Touch the Ethernet network card only by its edge or at the network bushing.
 - ⇒ Place the Ethernet network card only on a conductive surface.
- b) Carefully remove the optional Ethernet network card from the packaging.
- c) Carefully insert the Ethernet network card all the way into the opening at the back of the soldering station (see Fig. 12).

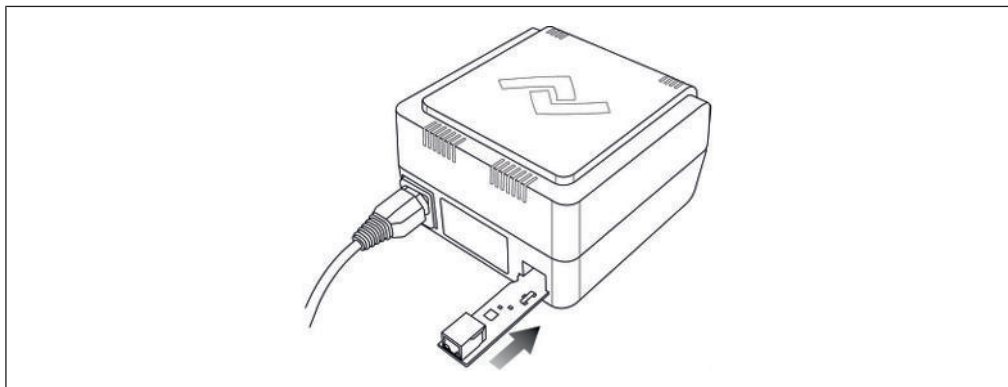


Fig. 17: Inserting the optional Ethernet network card

- d) Press the Reset key to reset the soldering station. Read more about this in Chapter [Resetting the soldering station with the reset key](#) [► 49].
- e) Connect the LAN cable to the Ethernet network card and connect it to the LAN.
- f) Make sure that the connection cables are never under strain!

5.10.1.1

Pulling out the optional Ethernet network card

If the Ethernet network card is to be pulled out again, proceed as follows:

- ✓ Switch off the soldering station.
- a) To prevent the Ethernet network card from being damaged during handling, ESD protective measures must be taken, as described in Chapter [Entering the optional Ethernet network card into the soldering station](#) [► 36] .
- b) Pull out the network cable and the soldering iron cable.
- c) Carefully turn the soldering station over so that the bottom side is facing upwards. When doing so, pay attention to the connected LAN cable.
- d) Press and hold the release lever [1] (see Fig. 13).

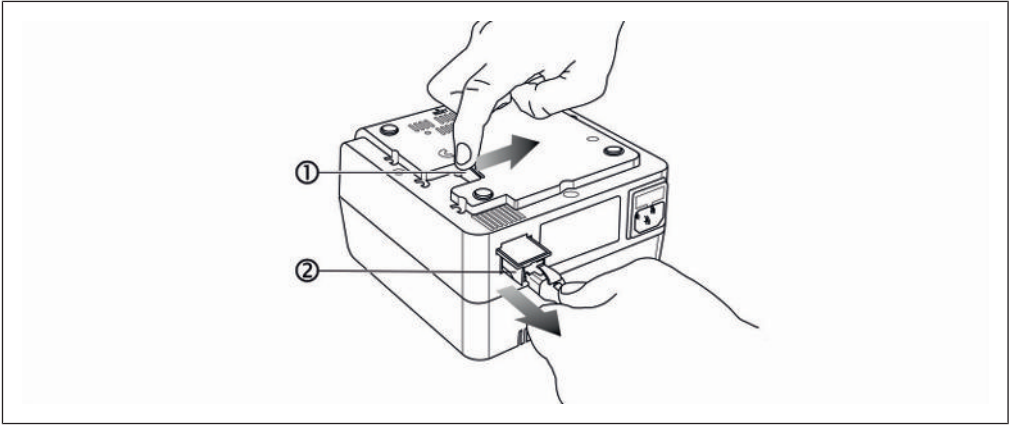


Fig. 18: Pulling out the Ethernet network card

- e) Carefully pull out the network card [2] by the LAN cable.
- f) The next time the soldering station is switched on, press the Reset button to reset it. Read more about this in Chapter [Resetting the soldering station with the reset key](#) [▶ 49].

6. Function description

6.1 Information on the LED indicators

ONLINE LED signals

Blue	The soldering station is waiting for the Bluetooth connection to be set up through the “Ersa TRACE” app for integration into the WLAN network
Yellow	Network alright, no connection to the “Ersa TRACE” app or “Ersa TRACE Cockpit” web app
Green	Network connection established
Red	No network connection / connection error

READY LED signals

Green	Soldering is possible
Red	Soldering tip temperature outside the set temperature range
Yellow	Standby mode, temperature is lowered
Flashing yellow	Sleep mode, heating element is switched off
Flashing blue	The heating element is switched off by tapping the soldering iron twice, e.g. to replace the soldering tip

SERVICE LED signals

Green	All functions running properly
Yellow	No tool connected
Red	Incorrect tool connected or error message in the “Ersa TRACE” app or in the “Ersa TRACE Cockpit” web app

Other LED signals

All 3 LEDs yellow	The Reset button has been pressed. The soldering station is set to the factory settings
All 3 LEDs flashing yellow	Firmware update in progress

6.2 Changing soldering tips

The new 142 soldering tip series was developed for the soldering station i-CON TRACE®. The “Ersa TRACE Cockpit” web app can use the QR code on each soldering tip to recognise the soldering tip and manage the work carried out with it.

6.2.1 Changing a soldering tip in the supporting stand

Info: Place the soldering iron only with the soldering tip mounted and only in the central soldering iron stand, not in the four changeable funnels on the side of the supporting stand! The changeable funnels may only be used for storing the soldering tips.

To change the soldering tip, the supporting stand can be used as described below.



CAUTION

Attention Risk of burns!

After switching off, the soldering tip remains hot for a long time!



CAUTION

Risk of burns! The soldering iron gets hot immediately after it is switched on!

Never touch the hot soldering tip or the hot heating element directly!

To prevent any material damage due to overheating, switch off the heating element or the soldering station before each soldering tip replacement! Never operate the soldering iron without the soldering tip!

Heating element immediate switch-off

- a) Double tap the soldering iron to turn off the heating element. While tapping, tilt the soldering iron slightly upwards (see Fig. 14).

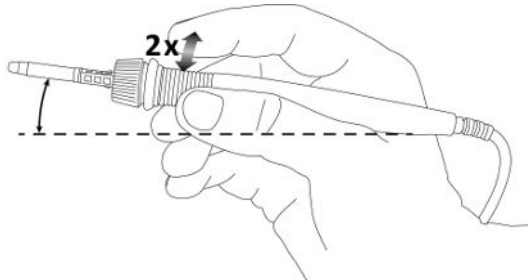


Fig. 19: Double tap the soldering iron

⇒ The READY LED is pulsing blue, which means that the heating element is off.

b) Alternatively, use the On/Off switch to turn off the soldering station.

Storing a soldering tip

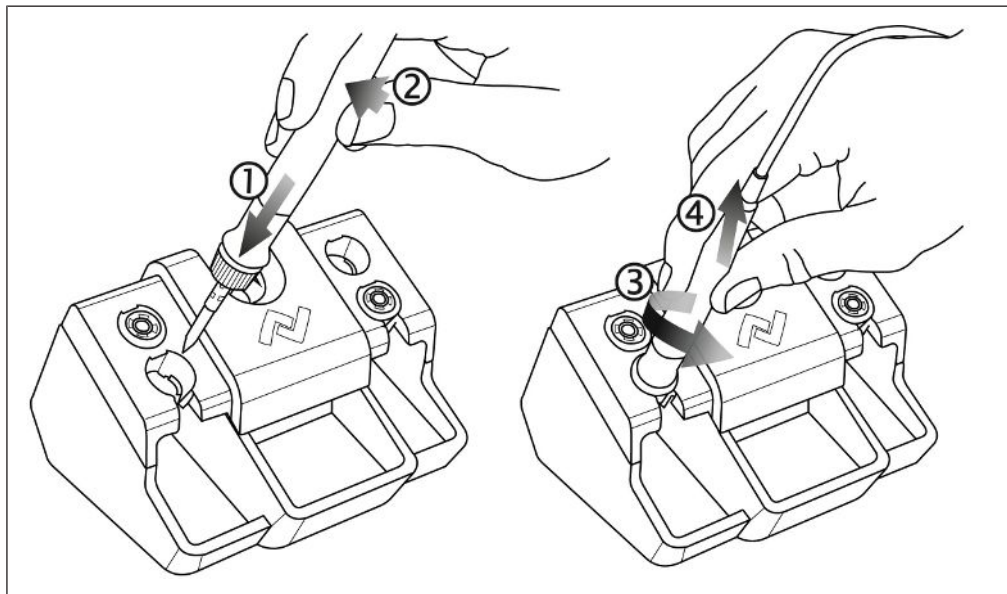


Fig. 20: A soldering tip can be stored in four steps

- a) Figure 15 on the left: Insert the soldering iron all the way into the changeable funnel [1], then tilt the soldering iron slightly away from you [2].
- b) Figure 15 on the right: Turn the soldering iron anti-clockwise as far as it will go [3], then tilt the soldering iron slightly away from you and pull it out of the soldering tip [4].

Picking up a soldering tip

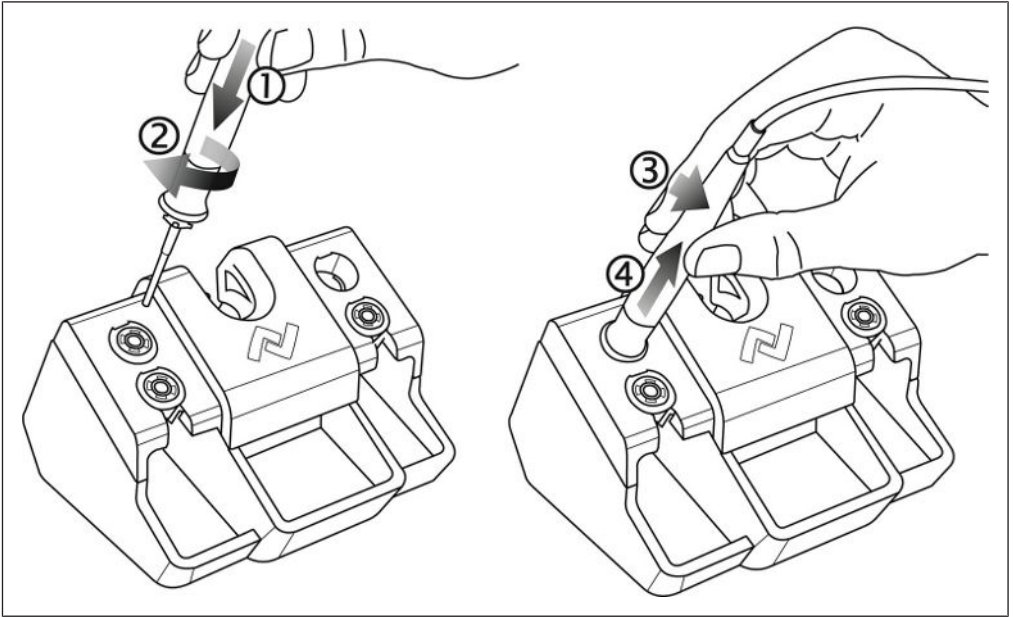


Fig. 21: A soldering tip can be picked up in four steps

- a) Figure 16 on the left: Insert the heating element all the way into the soldering tip [1], then turn the soldering iron clockwise as far as it will go [2].
- b) Figure 16 on the right: Turn the soldering iron slightly towards you [3] and pull it out [4].
- c) To check the soldering tip for tight seating:
Keep a correct distance between the knurled sleeve [2] and the soldering iron [3], as shown in Fig. 17.
The bayonet mount of the knurled sleeve is completely locked.
The display panels [1] do not touch the knurled sleeve [2].
- d) After changing the soldering tip, tap the slightly upwardly inclined soldering iron twice to switch the heating element or the soldering station back on again.

⇒ The READY LED is no longer pulsing blue.



Fig. 22: Soldering tip proper mounting

6.2.2 Manually replacing a soldering tip



CAUTION

Risk of burns! The soldering iron gets hot immediately after it is switched on!
Never touch the hot soldering tip or the hot heating element directly!



CAUTION

Risk of burns! After switching off, the soldering tip remains hot for a long time!
Always touch only the knurled plastic part! ([2] in Figure 17)

To prevent any material damage due to overheating, switch off the heating element or the soldering station before each soldering tip replacement! Never operate the soldering iron without the soldering tip!

Heating element immediate switch-off

- a) Double tap the soldering iron to turn off the heating element. While tapping, tilt the soldering iron slightly upwards (see Fig. 18).

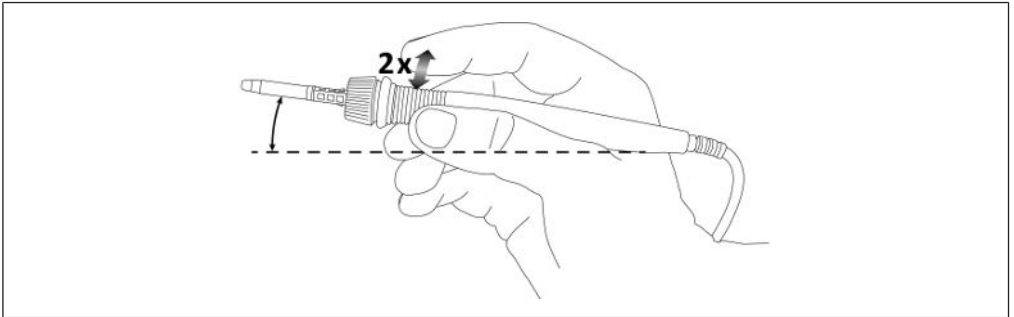


Fig. 23: Double tap the soldering iron

- ⇒ The READY LED is pulsing blue, which means that the heating element is off.
- b) Alternatively, use the On/Off switch to turn off the soldering station.

Replacing a soldering tip



⚠ CAUTION

Risk of burns! Allow the soldering iron to cool off until reaching a safe temperature!

Touching the knurled plastic component of the soldering tip is always at your own risk. If necessary allow the soldering tip to cool down completely before changing it.

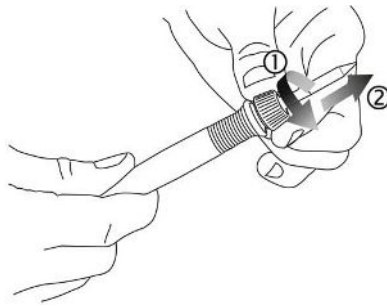


Fig. 24: Unlock [1] and pull out [2] the soldering tip

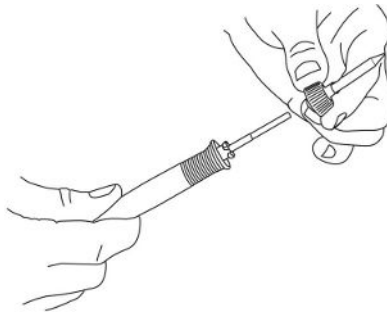


Fig. 25: Remove the soldering tip

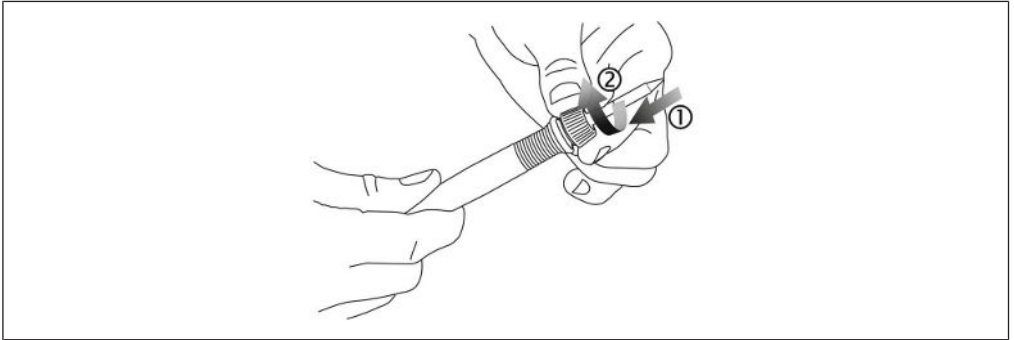


Fig. 26: Fit the soldering tip [1], overcome the spring force and lock the bayonet mount [2]

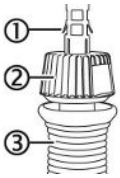


Fig. 27: Soldering tip proper mounting

- a) To check the soldering tip for tight seating:
Keep a correct distance between the knurled sleeve [2] and the soldering iron [3], as shown in Fig. 22.
The bayonet mount of the knurled sleeve is completely locked.
The display panels [1] do not touch the knurled sleeve [2].
 - b) After changing the soldering tip, tap the slightly upwardly inclined soldering iron twice to switch the heating element and/or the soldering station back on again.
- ⇒ The READY LED is no longer pulsing blue.

7. Service and maintenance

7.1 Error messages and error codes

The “Ersa TRACE” app and the “Ersa TRACE Cockpit” web app show errors (error codes with info messages). The SERVICE LED on the soldering station shows the error status. Read more about this also in Chapter [Information on the LED indicators](#) [► 39]. After the error has been eliminated and, if necessary, acknowledged, the connected soldering tool will be heated again.

List of error codes

Error message	Cause	Remedy
[Soldering station calibration]	Station is no longer calibrated	Have factory calibration performed
[Ambient temperature sensor]	Temperature sensor measure value not OK	Have soldering tool and soldering station inspected
[No HE contact] / [TS defective]	Heating element not correctly installed / Error in temperature sensor	Install the heating element correctly, have the soldering tool and heating element checked
[HE defective]	Heating element defective	Check the heating element, Soldering station inspection
[Data loss!]	Parameter/configuration data corrupted	Switch off the soldering station. Reset as described in Chap. Resetting the soldering station with the reset key [► 49] .
[HE short circuit]	Heating element short-circuited	Heating element replacement
[Soldering tool calibration]	Soldering tool is not calibrated any longer	Have factory calibration performed
[Mains frequency]	Mains frequency outside the frequency range ($\pm 10\%$)	Mains frequency check
[Overload protection]	Soldering station overloaded	Let the soldering station cool down

7.2 Error treatment

Should the soldering station malfunction, check the following:

- Soldering iron does not get hot.
Is the soldering iron connected correctly to the soldering station?
- Does the soldering station remain off after switch-on? / no line voltage?
Properly connect the mains cable to the soldering station and socket. To do so, follow the electrical specifications on the nameplate.
- Soldering station remains off after switch-on.
Is the fuse defective?
- Soldering tip is glowing red.
Immediately switch off the soldering station through the on/off switch [1] on the front of the device. Disconnect the mains cable from the soldering station. Contact the Ersä Service.

When using the soldering station in the LAN network, the connection can be interrupted by strong electromagnetic fields, e.g. during storms or if technical equipment is in close proximity. Switch the soldering station off and back on again to re-establish the connection.

7.2.1 Replacing the fuse

- a) Switch off the soldering station and pull out the mains plug.



CAUTION

Danger of electric shock!

Before changing the fuse, disconnect the soldering station from the mains by pulling out the mains plug!

- a) Carefully pry open the fuse compartment under the mains connection using, for example, a flat-blade screwdriver (see Fig. 23).

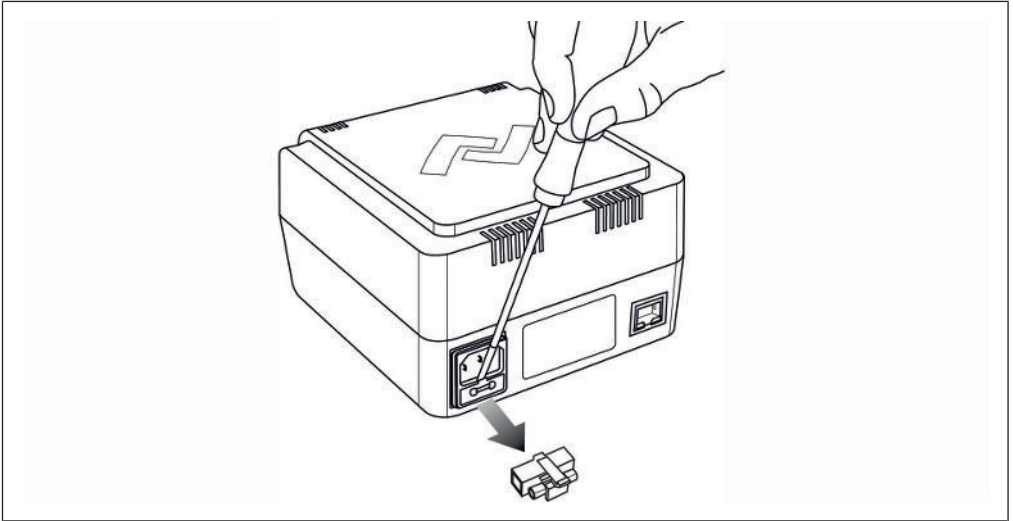


Fig. 28: Replacing the fuse

- b) Remove the fuse holder and replace the “0.8 A slow-blow” fuse for the 230 V variant, or the “1.6 A slow-blow” one for the 115 V variant in the holder.
- c) Re-install the fuse holder and close the compartment.

Note that a defective fuse may also indicate a deeper cause of error. If replacing the fuse does not solve the problem and no solution cannot be found under Error treatment [► -47] please e-mail the Ers Service to: Service.tools@kurtzera..com

7.2.2

Changing the heating element



CAUTION

Risk of burns! Only change the heating element when both the soldering tip and the heating element are cold!

Before changing the heating element, switch off the soldering station and allow the soldering tip and the heating element to cool down!

- a) Remove the soldering tip.
- b) Pull the heating element out by hand.

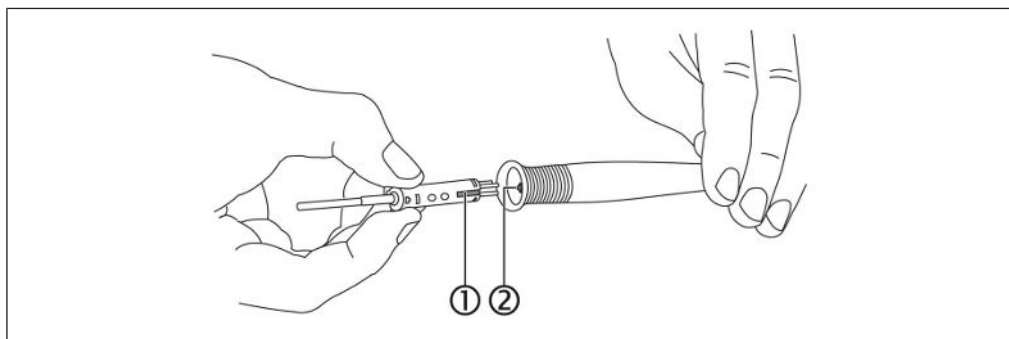


Fig. 29: Replace the heating element

- ✓ Slide in the spare heating element.
- a) Align the groove of the heating element [1] with the marking in the soldering iron [2].
- b) Align the heating element exactly parallel to the soldering iron.
- c) Gently push the heating element in carefully and slowly until it stops. If the heating element cannot slide in easily, do not press with greater force, but re-position it!
- d) Re-install the soldering tip.

7.2.3

Resetting the soldering station with the reset key

If connection problems occur between the “Ersa TRACE” app or the “Ersa TRACE Cockpit” web app and the soldering station, which cannot be remedied, resetting the soldering station to the factory settings is recommended. The default settings are described in Chapter [Defaults](#) [[▶ 53](#)].

Resetting the soldering station

- ✓ Make sure the soldering station has been switched off,
- ✓ the soldering iron cable pulled out and
- ✓ the mains plug connected.
- a) If any, disconnect the optional LAN cable.
- b) Carefully turn the soldering station over so that the bottom of the device is facing upwards. When doing so, beware of the connected mains cable.
- c) Press and hold down the reset button [12] (see Fig. 25) on the bottom with a suitable object (e.g. a paper clip). Do not use a pointed object.

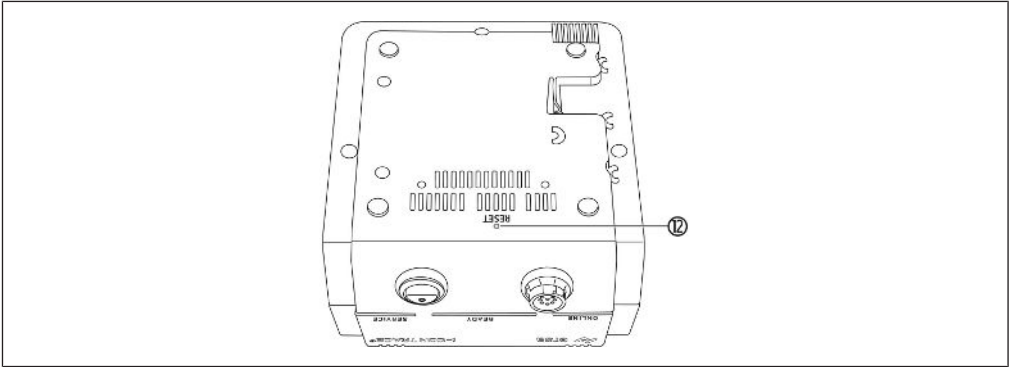


Fig. 30: Reset button [12] on the bottom of the device

- d) With the reset button pressed in, switch on the soldering station.
- e) When all 3 LEDs light up yellow, release the reset button.
 - ⇒ The soldering station has been reset to factory settings.
- f) Turn off the soldering station.
- g) Plug back in the disconnected cable.
- h) When using a WLAN for network connection:
 After a reset, the soldering station must be reintegrated into the WLAN. To do so, use the Bluetooth function of the “Ersa TRACE” app on a mobile device. Read more about this in Chapter [Establishing a WLAN connection between the soldering station and a network](#) [▶ 29].

7.2.4

Possible defects

The following errors indicating possible defects of the soldering station may occur.

- The soldering station shows permanently only the room temperature.
 The heating element or the supply line to the soldering iron is defective.
 The room temperature is also displayed when the soldering station has been idle for a few minutes (Ready LED pulsing yellow).

Info: If the soldering station is sent in for repair, all accessory tools must be shipped with it.

7.3 Cleaning and Maintenance

Info: There are no user-serviceable parts inside the soldering station.



CAUTION

Danger of electric shock!

Before cleaning, de-energise the soldering station by pulling out the mains plug!



CAUTION

Attention Risk of burns!

After switching off, the soldering tip remains hot for a long time!

Cleaning

- Occasionally clean the device with a soft, damp cloth. Do not use abrasive sponges, scouring agents, solvents such as alcohol or gasoline, steam or high-pressure cleaners.
- Wipe dust deposits from the ventilation openings dry.
- The supporting stand can be opened so that it can be cleaned inside.

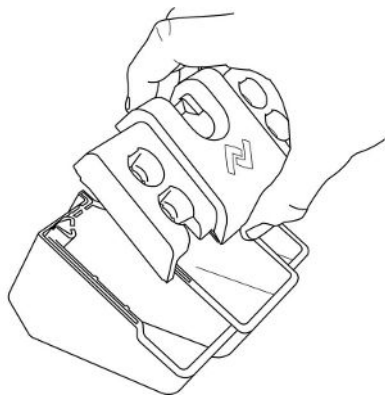


Fig. 31: Opening the supporting stand

Maintenance work

- Always leave a small amount of solder on the soldering tip after soldering, in order to extend its service life. An untinned soldering tip becomes passive within a short time.

- b) If necessary, wipe the soldering tip clean by dipping it several times into the dry cleaner shortly before the soldering process. Alternatively, the sponge can be dampened, placed in the supporting stand and used to clean the soldering tip.
- c) To achieve good electric and heat conductivity, the tip should be occasionally removed and the heating element cleaned with a brass brush.
- d) Use only original accessories and spare parts from Ersä.
- e) Make sure that the ventilation openings of the station do not lose their effectiveness due to dust buildups.
- f) There are no parts to be serviced inside the device.

7.4 Defaults


The following table shows the factory settings. After a reset with the reset key (see chap. [Resetting the soldering station with the reset key \[▶ 49\]](#)), the current settings are deleted and the factory settings restored.

Parameter	Value
Target temperature (°C / °F)	360 / 680
Temperature range above (Δ°C / Δ°F)	20 / 68
Temperature range below (Δ°C / Δ°F)	20 / 68
Energy level	Medium
Standby time (min)	2
Standby temperature (°C / °F)	210 / 410
Shutdown time (min)	10
Calibration temperature (Δ°C / Δ°F)	0 / 0

8. Spare/wear parts and accessories

0ICT103A	Electric soldering station i-CON TRACE [®] , 220-240 V / 110-120 V, anti-static
0140CDJ	Soldering iron i-TOOL TRACE, 24 V, 150 W, anti-static, with soldering tip 0142CDLF16
0A58	Anti-static supporting stand Tip'n'Turn
014100J	Heating element for i-TOOL TRACE
0ICT125	Ethernet LAN network card
0008M/SB	Dry cleaning agent
0004G/SB	Cleaning sponge
0009/SB	Splash guard
3TZ00051	Brass cleaning brush
0142...	Soldering tip of Series 142

To open the list of all soldering tips included in the 142 series, use the Internet quick link [142.ersa.com](https://www.142.ersa.com).

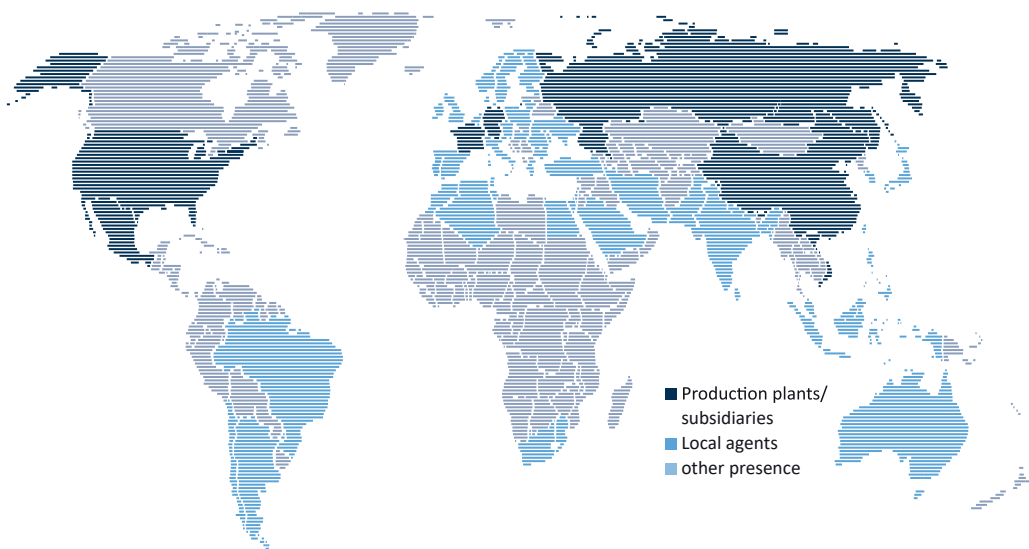

Electronics Production Equipment

GLOBALLY PRESENT

America

Kurtz Ersä, Inc.
usa@kurtzersa.com
www.ersa.com

Mexico

Kurtz Ersä, S.A. de C.V.
info-kmx@kurtzersa.com
www.ersa.com

France

Ersa France
ke-france@kurtzersa.com
www.kurtzersa.com

Asia

Kurtz Ersä Asia Ltd.
asia@kurtzersa.com
www.ersa.com

China

Ersa Shanghai
info-esh@kurtzersa.com
www.ersa.com

Vietnam

Kurtz Ersä Vietnam
Company Limited
info-kev@kurtzersa.com
www.ersa.com